




RCX 1.0 Batteries Replacement

How to remove and replace the batteries in any RCX (not just 1.0).


Written By: notexactly

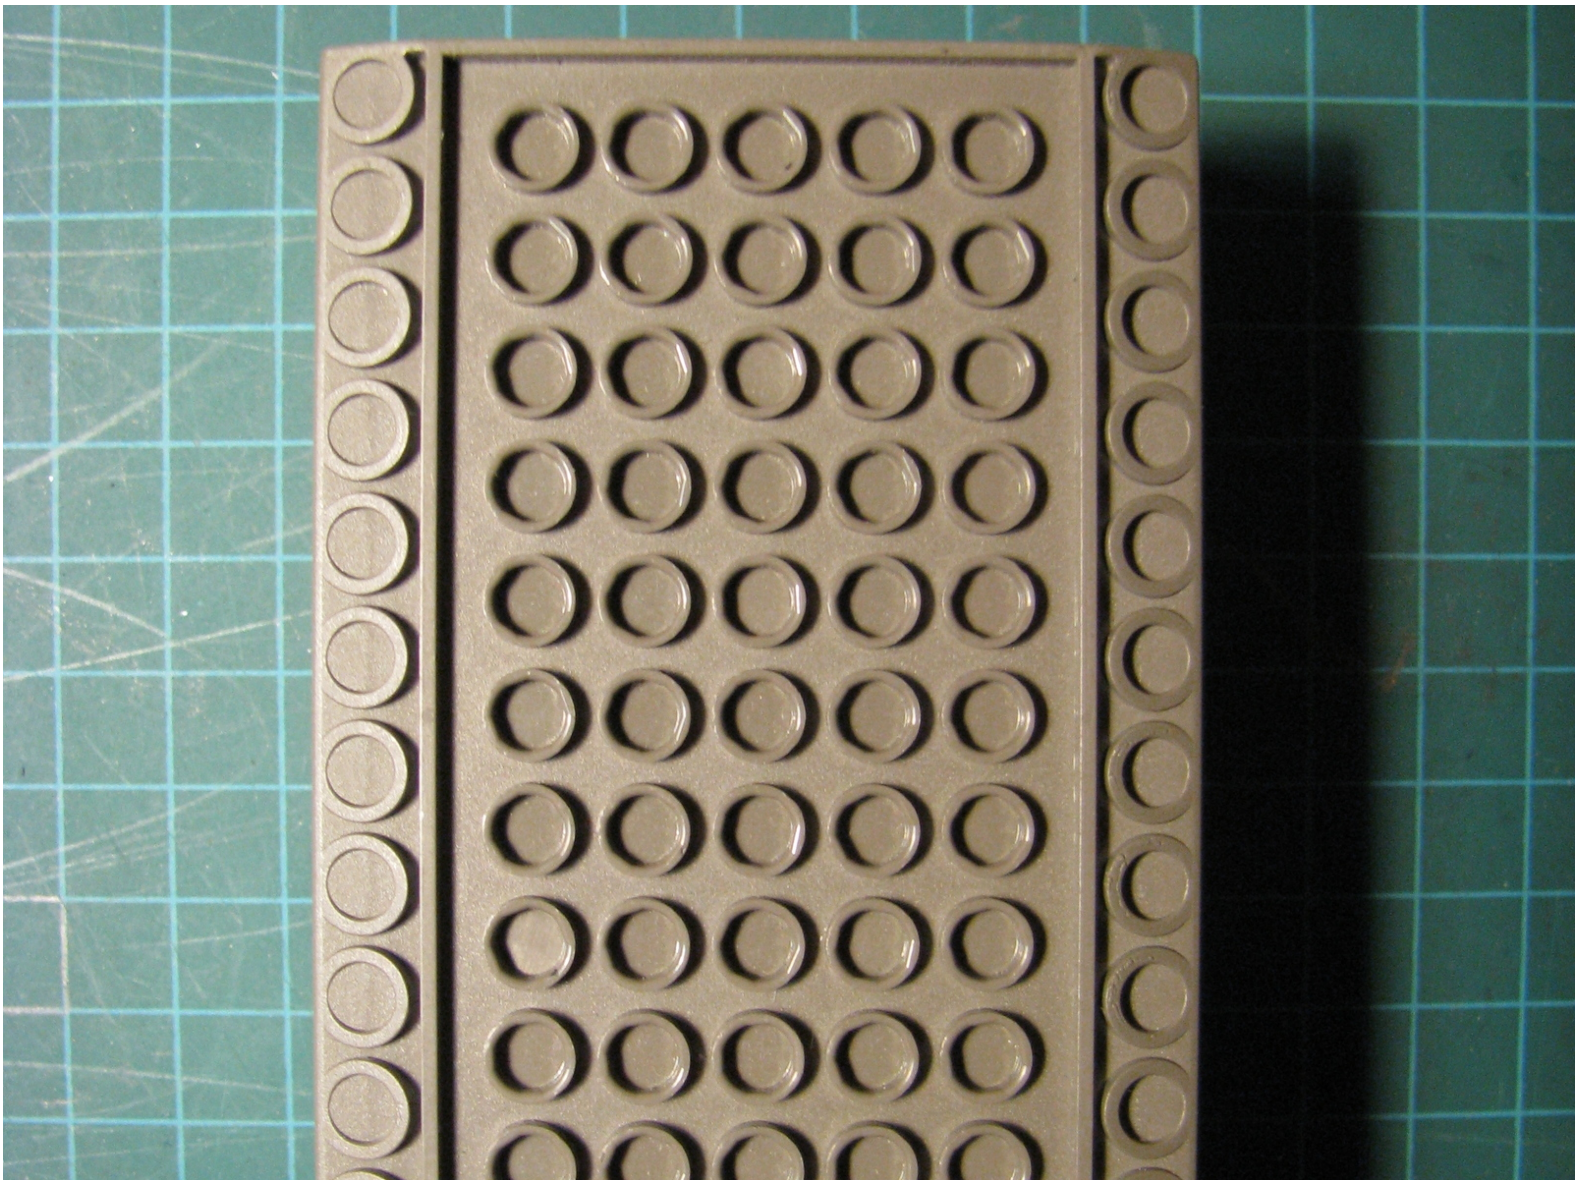

INTRODUCTION


When your RCX runs out of battery power, you'll need to put in new batteries.

Step 1 — Batteries

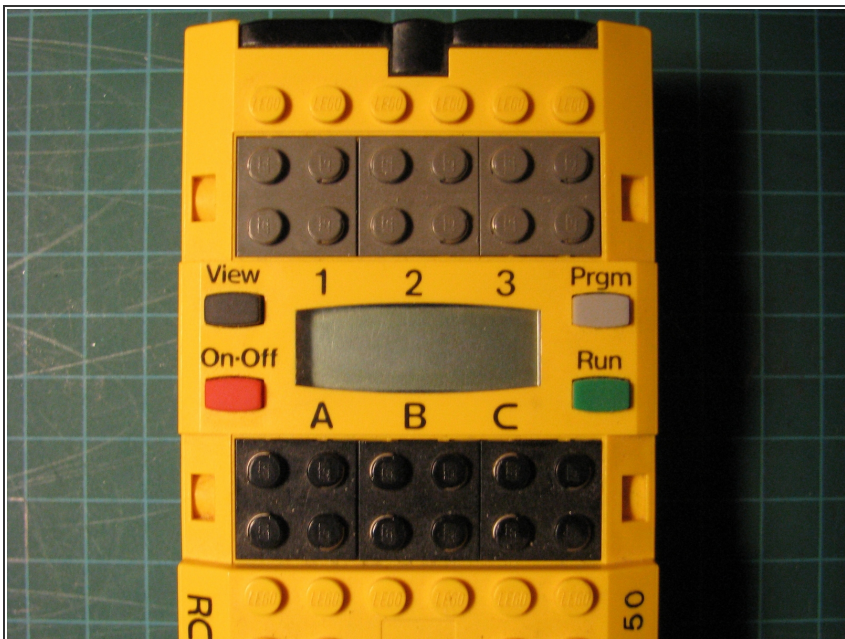


- Place the RCX on a flat surface.

Step 2

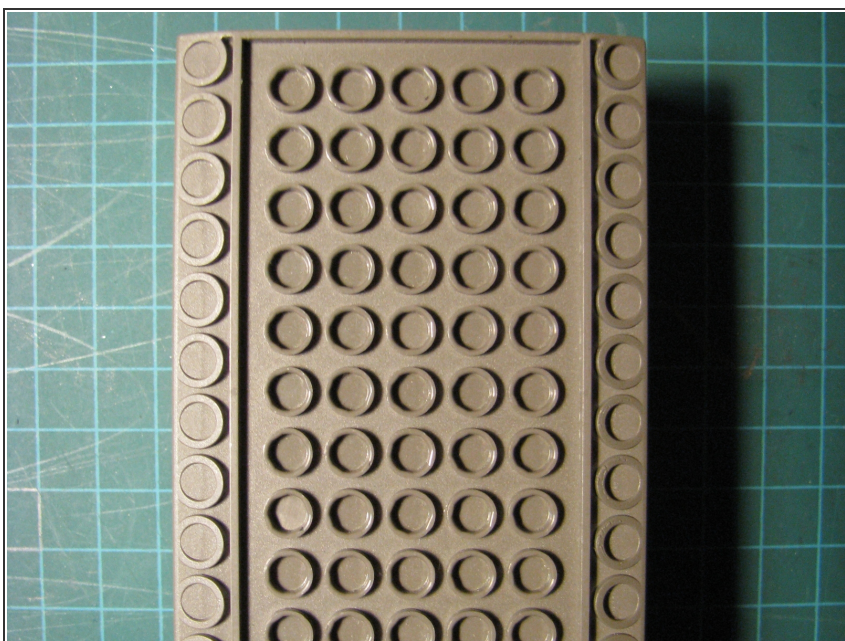

- Flip the RCX over so its black IR window is facing away from you.

Step 3

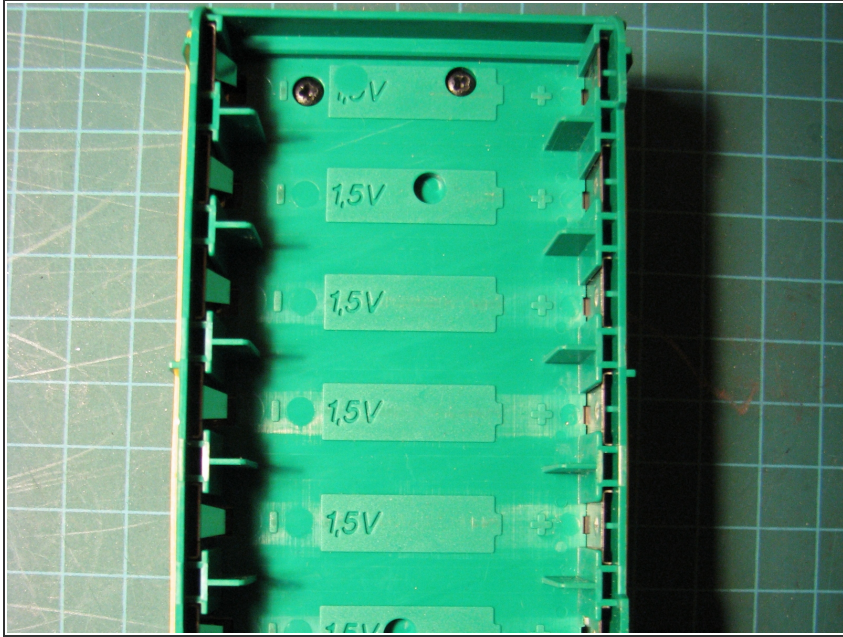

- Remove the gray battery cover by lifting from the front (near the IR window). Raise it at an angle and remove it to reveal the green battery compartment.
- You can now remove the batteries and insert new ones.

To reassemble your device, follow these instructions in reverse order. The orientation of the gray battery cover doesn't matter.

This document was last generated on 2017-06-24 08:36:17 PM.